

# STV Eliminator

## Supplementary Manual



### Kawasaki ZX-6R Ninja 2005-2006 (STVE-11)

Secure the bike on a stand.



Remove the black frame covers below the main seat.

Remove the seats.

Lift up or remove the fuel tank.



Locate the throttle body assembly under the fuel tank.

Find the two connectors of the actuator motor and the STPS (secondary throttle position sensor) on the throttle body assembly.



# STV Eliminator

## Supplementary Manual



### Kawasaki ZX-6R Ninja 2005-2006 (STVE-11)

Remove the butterfly valve flaps/throttle plates.

Plug the STVE module into the 4-pole White wiring harness connector.

Plug the STVE module into the 3-pole Black wiring harness connector.



Typical position for the STVE.

Secure the unit properly.

