

NOTICE DE MONTAGE

SAUTE VENT & TETE DE FOURCHE ERMAX ADAPTABLE SUR KAWASAKI Z650 2017/2019

Durée du montage estimé : 15 min




Kit de fixation


- 1 patte de fixation
- 4 vis BHc 5x15 grosse tête noire
- 4 rondelles plastique Ø5
- 4 inserts caoutchouc Ø5

Montage

- Démonter le saute-vent d'origine. Débrancher le bloc compteur puis démonter la patte de fixation du saute-vent.
- Fixer la patte de fixation fournie avec les vis d'origine en lieu et place de celle démontée précédemment. Rebrancher le compteur.



-  : vis à démonter et conserver
-  : broche à débrancher
-  : emplacement des inserts caoutchouc

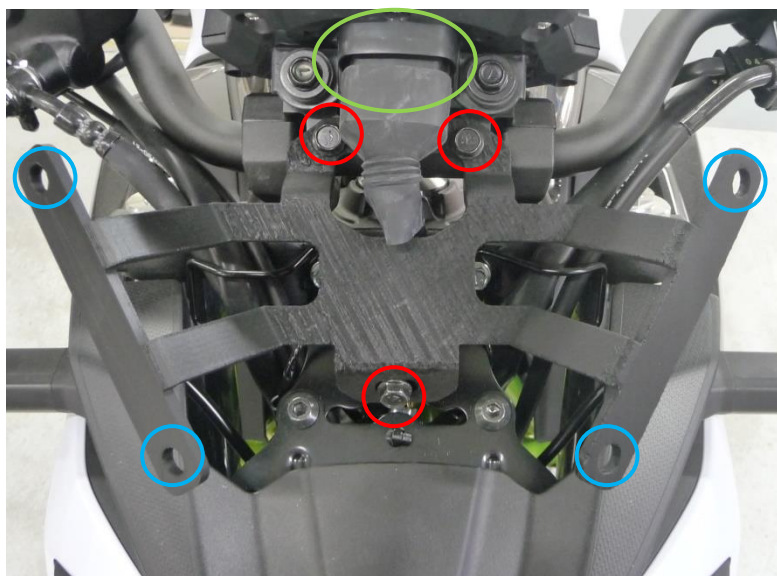

- Mettre en place les inserts caoutchouc sur la patte de fixation et fixer le saute-vent avec les vis BHC 5×15 et les rondelles plastique fournie.

« ATTENTION »

- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- * Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.
- * Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.

FITTING INSTRUCTIONS

ERMAX NOSE SCREEN & NOSE FAIRING ADAPTABLE ON KAWASAKI Z650 2017/2019

Estimated mounting time: 15 min




Fitting kit


- 1 fitting bracket
- 4 screws BHc 5x15 black big head
- 4 plastic washers Ø5
- 4 rubber inserts Ø5



Fitting instructions

- Remove the original nose screen. Disconnect the meter unit and then take off the fitting bracket of the nose screen.
- Fit the supplied fitting bracket with the original screws instead of the one removed previously. Reconnect the meter.

-  : screw to remove and keep
-  : pin to disconnect
-  : Location of the rubber inserts

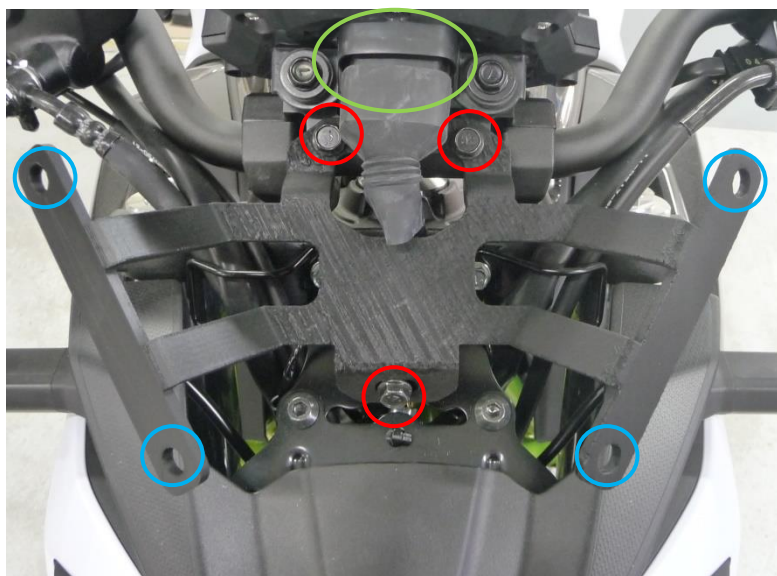

- Place the rubber inserts on the fitting bracket and screw the nose screen with the provided screws BHC 5×15 and plastic washers.

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.