

## **NOTICE DE MONTAGE**

**CAPOT DE SELLE ERMAX**  
**ADAPTABLE SUR YAMAHA MT 07 2018 →∞**  
*Durée estimée de montage : 30 mn*


### **Kit de fixation**

- 3 pattes de fixation
- 4 vis BHc 5×15 petite tête
- 4 inserts caoutchouc M5
- 1 morceau de film adhésif de protection
- 2 petites butées caoutchouc autocollantes



### **Montage**

- Placer les inserts caoutchouc M5 dans les trous à l'intérieur du capot Ermax.
- Monter les pattes de fixation sur le capot de selle et coller les butées caoutchouc aux endroits indiqués sur la photo ci-dessous.

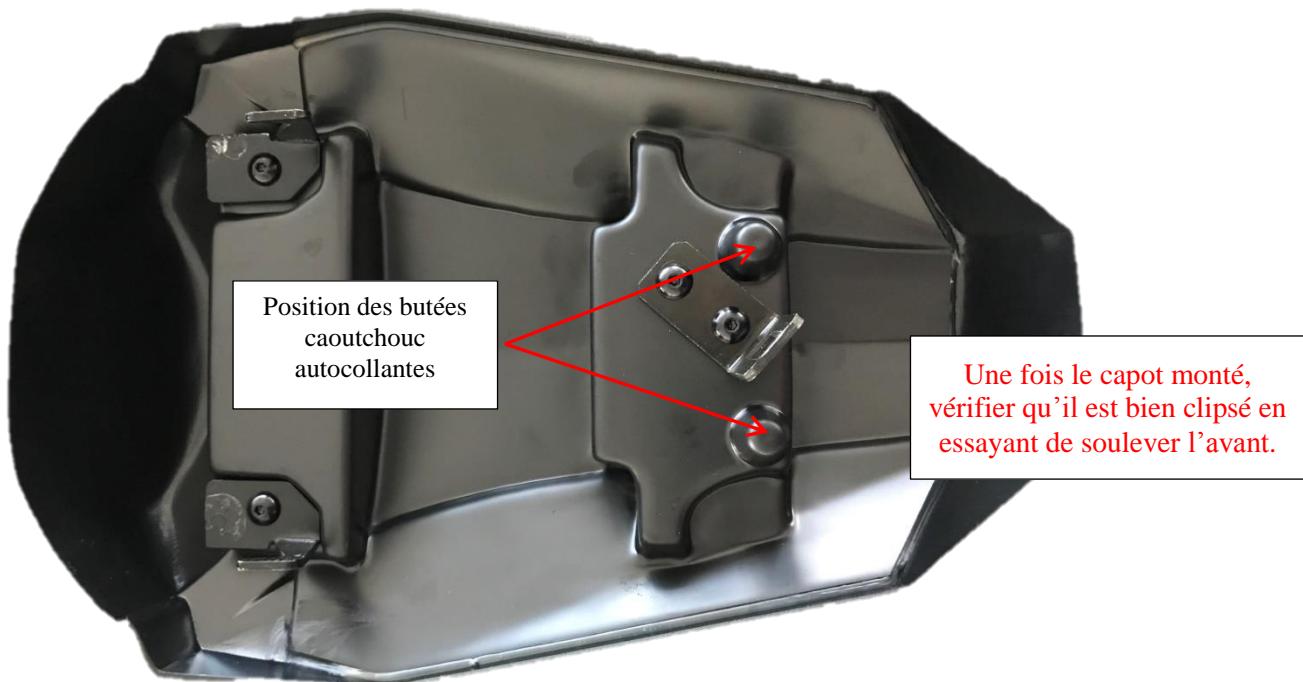

- Si besoin, découper et coller le film adhésif fourni entre la coque arrière et la tranche du capot (protection contre les rayures éventuelles).

#### **«ATTENTION»**

- \* Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'**attendre un mois** afin d'obtenir une polymérisation complète du vernis.
- \* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- \* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- \* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- \* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- \* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

## FITTING INSTRUCTIONS

**ERMAX SEAT COVER  
 ADAPTABLE ON YAMAHA MT 07 2018 →∞  
 Estimated mounting time : 30 mn**


### Fitting kit

- 3 fitting brackets
- 4 screws BHc 5×15 small head
- 4 rubber inserts M5
- 1 piece of protective adhesive film
- 2 small self-adhesive rubber stops



### Fitting instructions

- Place the rubber inserts M5 in the holes inside the Ermax seat cowl.
- Place the fitting brackets on the seat cover and glue the rubber stops to the places shown on the photo below.

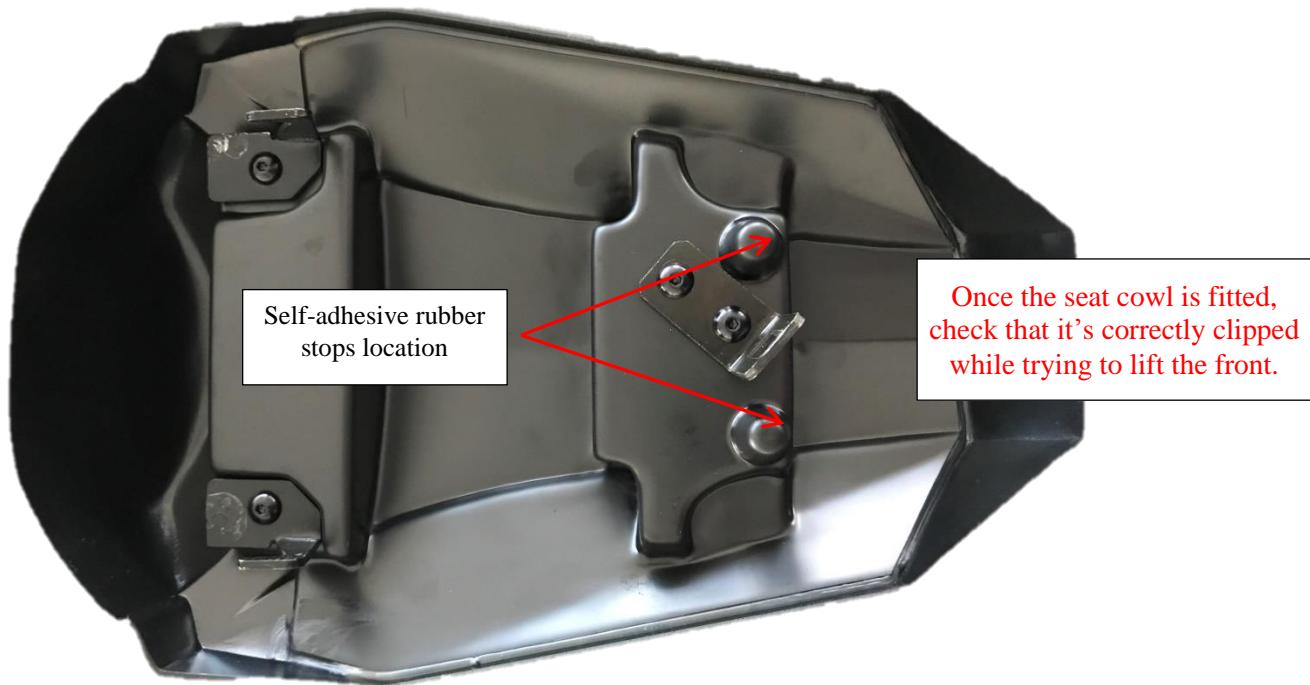

- The provided self-adhesive film can be cut and glued between the rear fairing and the edge of the seat cowl (to protect against the scratches).

#### **«CAUTION»**

- \* Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, **to wait one month** to obtain a complete polymerization of varnish.
- \* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- \* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- \* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjusting to fit.
- \* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- \* Care to excessive clamping which may damage or break our plastic accessories and aluminium screws.