



IRC ADDITIONAL MODULE HARNESS FOR COILS

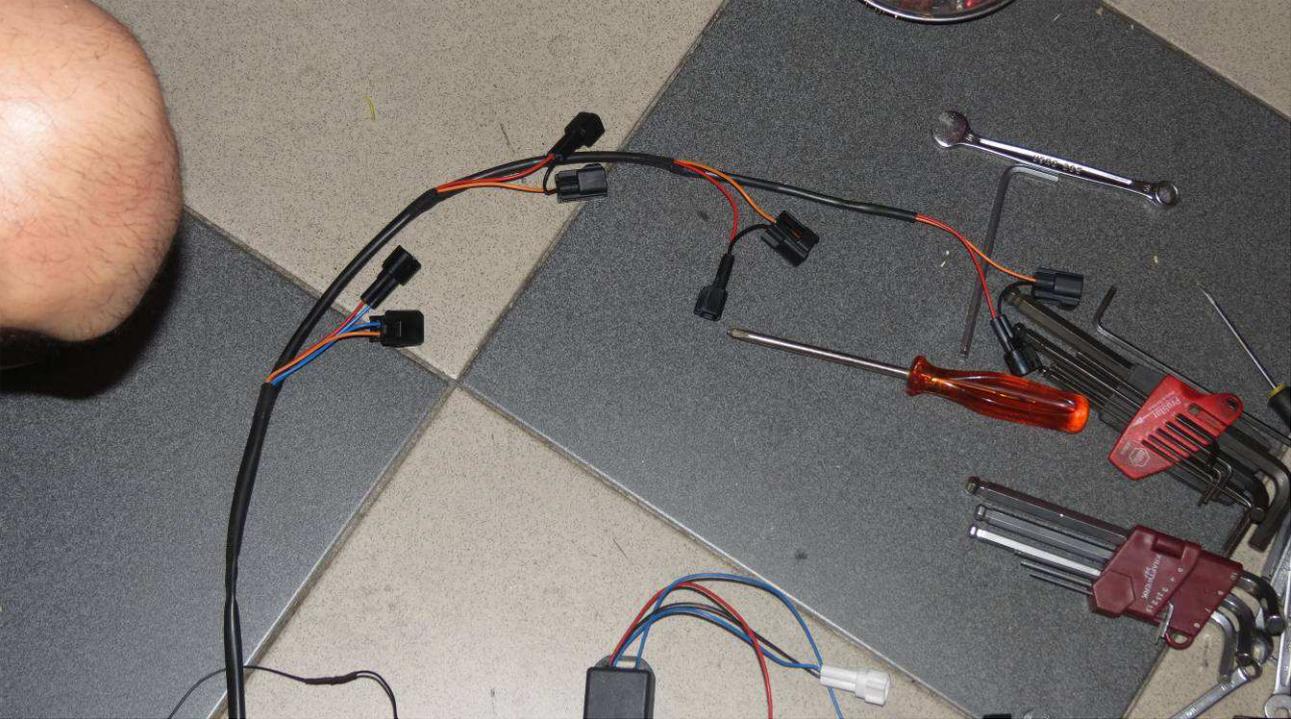


CONNECT IT TO COILS




LOCATE THE APS CONNECTOR AND CONNECT IRC HARNESS (IT IS WHERE WIRES FROM THROTTLEGRIP ARRIVES. ON R6 ON THE LEFT, ON R1 ON THE RIGHT)

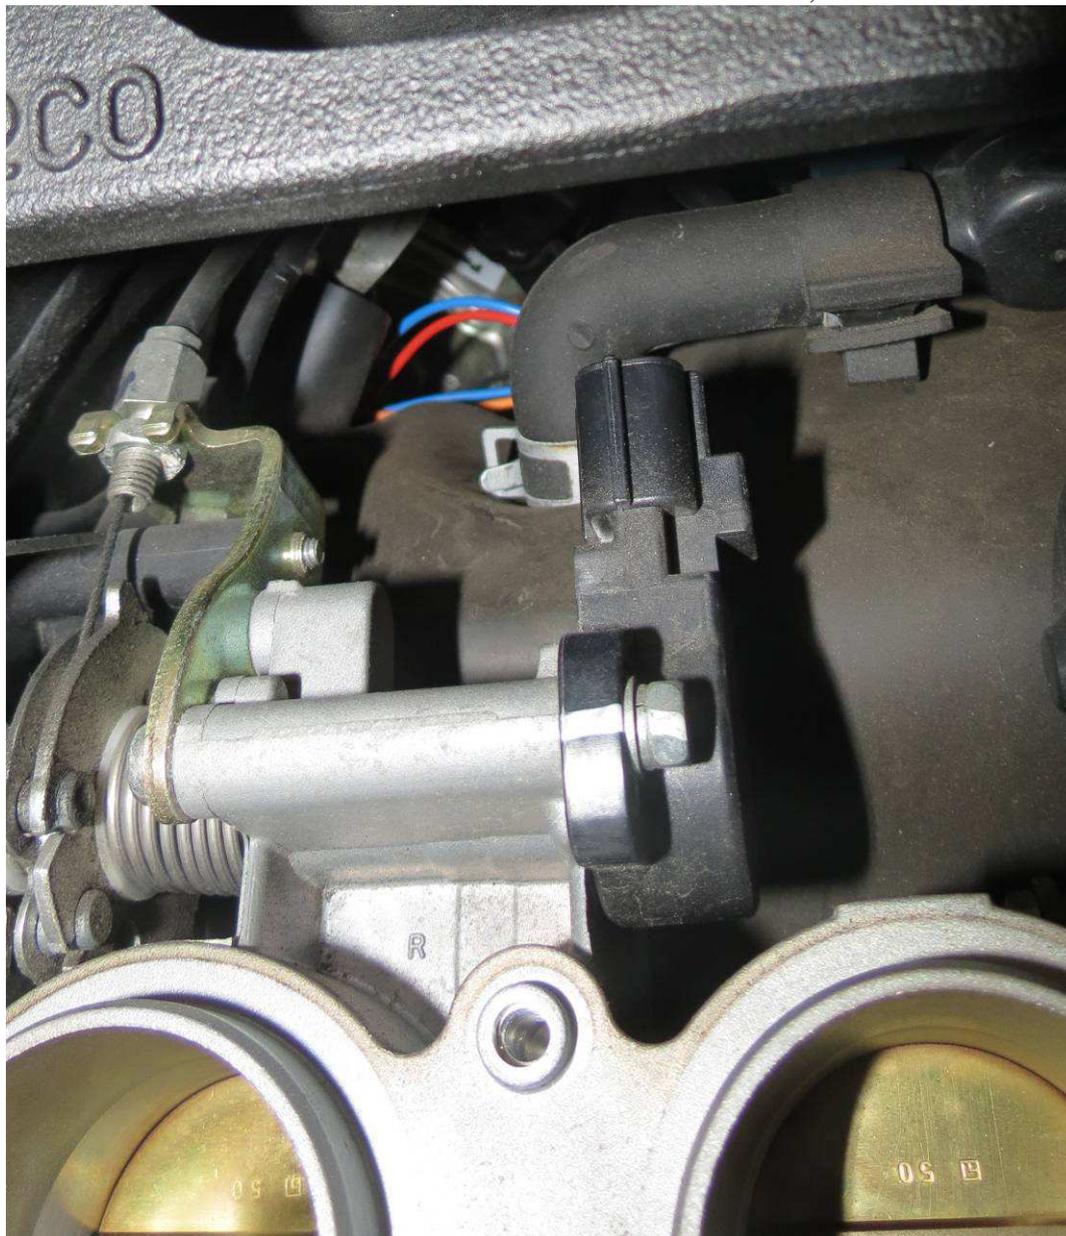

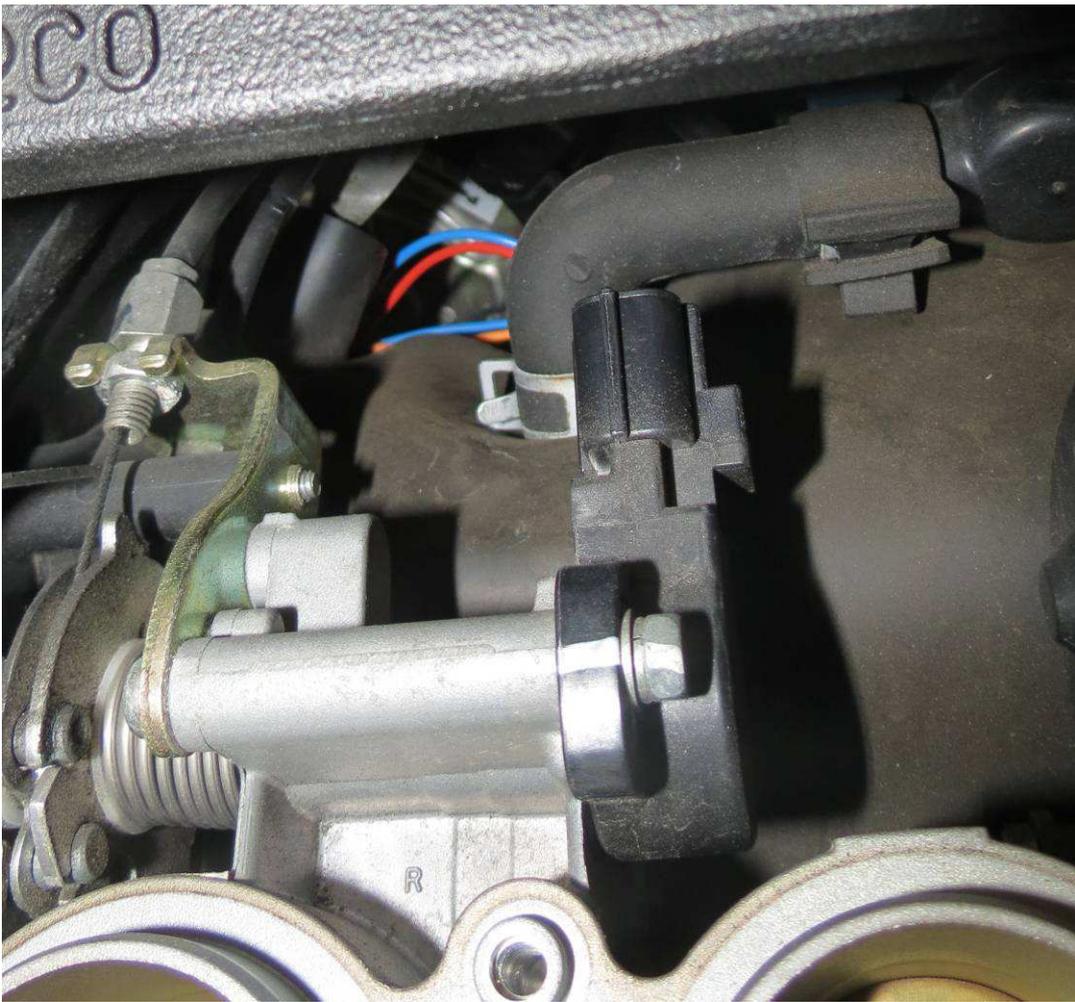




CONNECT THE POWER CONNECTOR OF THE BLIPPER TO THE ADDITIONAL MODULE FOR THE UPSHIFT

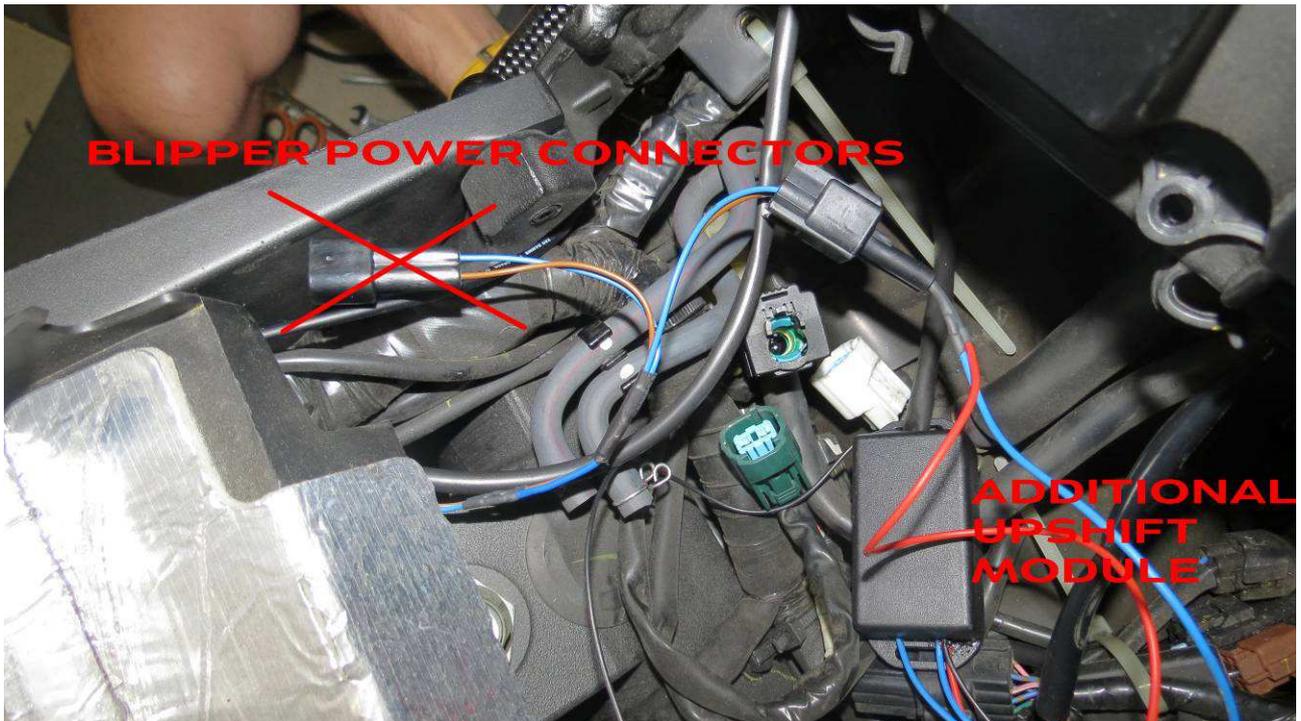

CONNECT THE BLIPPER UPSHIFT CONNECTOR TO THE ADDITIONAL MODULE FOR THE UPSHIFT. CONNECTORS AREN'T PROVIDED. YOU MUST CONNECT AS YOU LIKE THE 2 SAME COLOR WIRES.

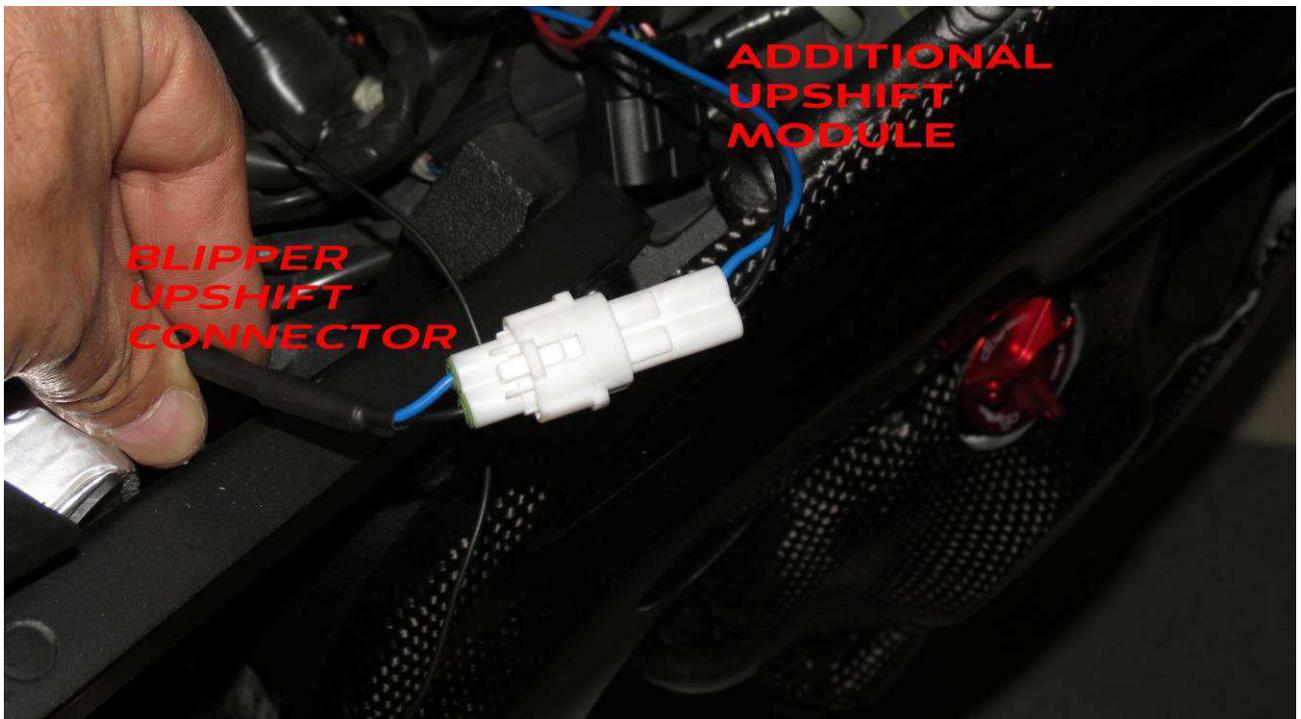

INSTALL THE SENSOR. BE CAREFUL TO PROPERLY CLOSE THE BOLTS IN ORDER TO HAVE FIXED HARD PARTS AND NOT THAT THE SENSOR IS BENDING DURING UP AND DOWNSHIFT.

